


N3WL-LI CORE BARREL

KUVAWALA 'LI' WIRELINE CORE BARRELS WITH LANDING INDICATOR.

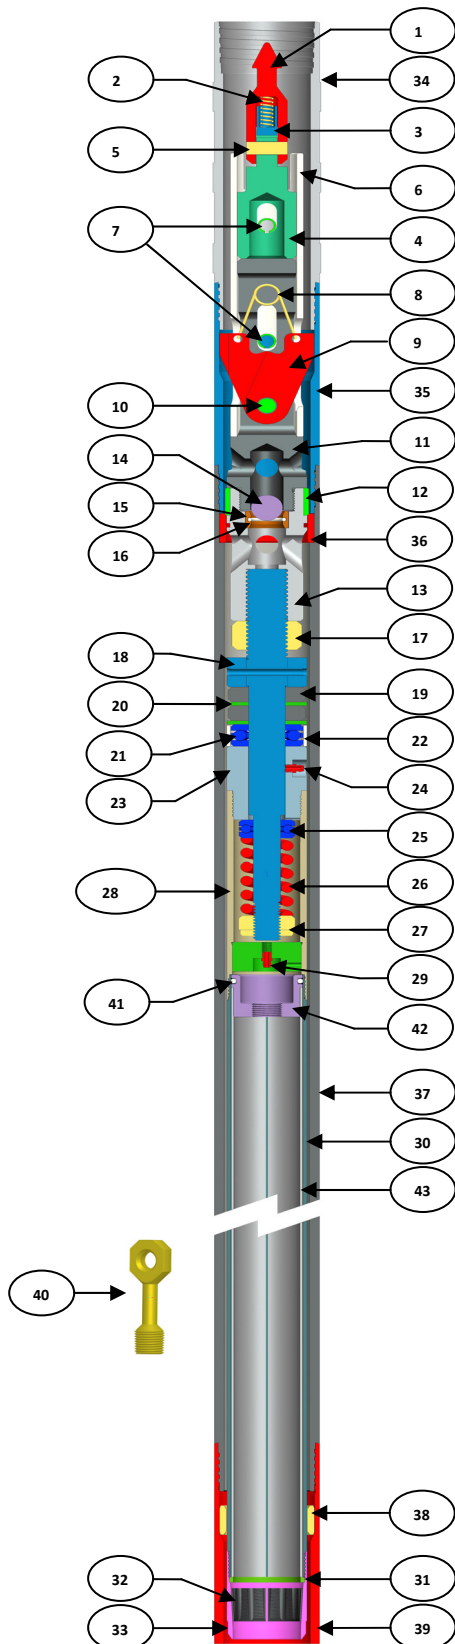

	ITEM DESCRIPTION	PART NUMBERS
1-44	N3WL-LI CORE BARREL 3.0m / 10 ft	17-00-100
1-44	N3WL-LI CORE BARREL 1.5m / 5 ft	17-00-110
1-33	N3WL-LI INNER TUBE ASSEMBLY	17-00-120
1-29	NWL-LI HEAD ASSEMBLY	16-00-130
1	SPEARHEAD POINT	16-03-001
2	COMPRESSION SPRING	16-03-002
3	DETENT PLUNGER	16-03-003
4	POINT BODY	16-03-004
5	SOLID DOWELL 7/16" x 1"	16-03-005
6	CASE LATCH	16-03-006
7	SPRING DOWELL 1/2" x 2" - 2 NOS.	16-03-007
8	LATCH SPRING	16-03-008
9	NWL-LI LATCH - 2 NOS.	16-03-009
10	SOLID DOWELL 1/2" x 1 1/2"	16-03-010
11	UPPER BODY LATCH	16-03-011
12	LANDING SHOULDER	16-03-012
13	LOWER BODY LATCH	16-03-013
14	STAINLESS STEEL BALL 22 mm	16-03-014
15	LANDING INDICATOR BUSH	16-03-015
16	LANDING INDICATOR BUSH O RING	16-03-016
17	ADJUSTING HEX NUT	16-03-017
18	ADJUSTING SPINDLE	16-03-018
19	SHUT OFF VALVE - 2 NOS.	16-03-019
20	WASHER - 2 NOS.	16-03-020
21	THRUST BEARING	16-03-021
22	BEARING COVER	16-03-022
23	BEARING SPINDLE	16-03-023
24	GREASE FITTING	16-03-024
25	THRUST BEARING	16-03-025
26	COMPRESSION SPRING	16-03-026
27	NYLOCK NUT, 3/4" UNC	16-03-027
28	INNER TUBE CAP ASSEMBLY	16-03-028
29	GREASE FITTING	16-03-024
30	INNER TUBE 1.5m / 5 ft	16-03-029
30	INNER TUBE 3.0m / 10 ft	16-03-030
31	RING STOP 3T	17-03-031
32	CORE LIFTER 3T	17-03-032
33	CORE LIFTER CASE 3T	17-03-033
34	LOCKING COUPLING	16-02-001
35	ADAPTER COUPLING	16-02-002
36	RING LANDING	16-02-003
37	OUTER TUBE 1.5m / 5 ft	16-02-004
37	OUTER TUBE 3.0m / 10 ft	16-02-005
38	STABILIZER RING	16-02-006
39	THREAD PROTECTOR	16-02-007
40	PISTON PLUG	17-04-001
41	O RING	17-04-002
42	CORE EJECTION PISTON	17-04-003
43	SPLIT TUBE 1.5m / 5ft	17-04-004
43	SPLIT TUBE 3.0m / 10 ft	17-04-005
44	PUMP OUT ADAPTOR 1/2" NPT	17-04-006

Head Office: 524, Arun Chambers, Tardeo, Mumbai 400 034. INDIA.

Factory: Hadapsar, Pune. Tel.: +91-22-6663 5452 / 2351 6141

Email: sales@kuvawalacoredrill.com / mgk@kuvawalacoredrill.com

www.kuvawalacoredrill.com