


PWL-LI CORE BARREL

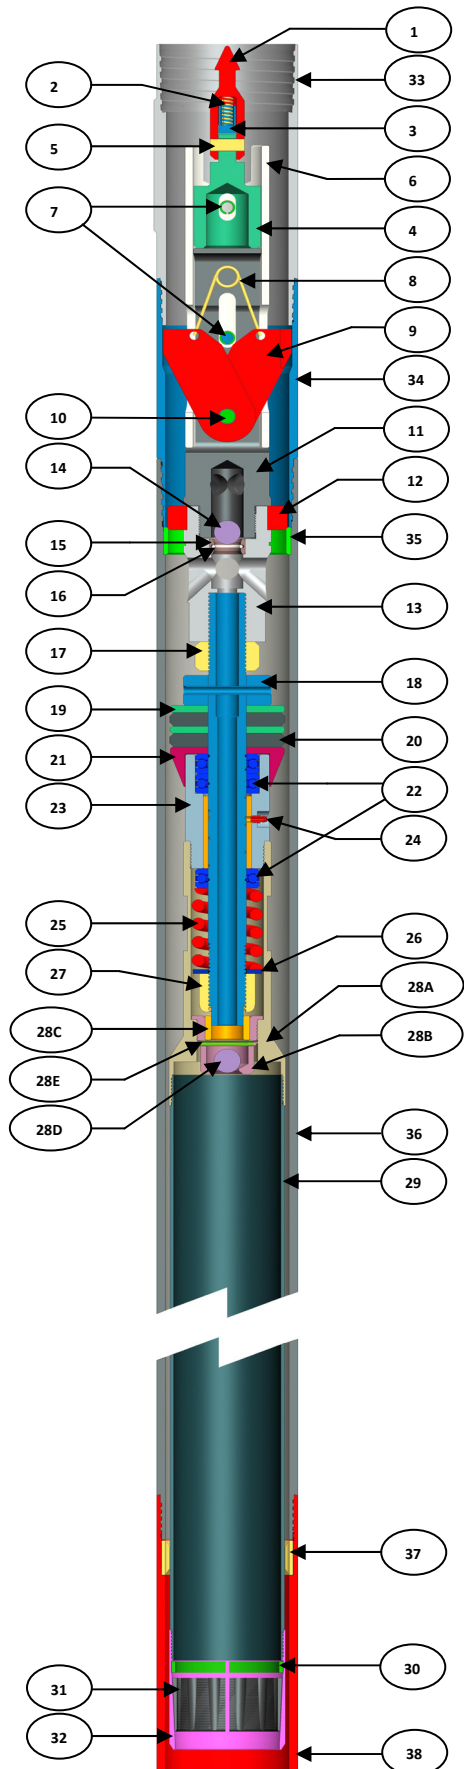

KUVAWALA ' LI ' WIRELINE CORE BARRELS WITH LANDING INDICATOR

	ITEM DESCRIPTION	PART NUMBERS
1-38	PWL-LI CORE BARREL 3.0m / 10 ft	20-00-100
1-38	PWL-LI CORE BARREL 1.5m / 5 ft	20-00-110
1-32	PWL-LI INNER TUBE ASSEMBLY	20-00-120
1-28	PWL-LI HEAD ASSEMBLY	20-00-130
1	SPEARHEAD POINT	16-03-001
2	COMPRESSION SPRING	16-03-002
3	DETENT PLUNGER	16-03-003
4	POINT BODY	18-03-001
5	SOLID DOWELL 7/16" x 1"	16-03-005
6	CASE LATCH	20-03-001
7	SPRING DOWELL 1/2" x 2 3/4" - 2 NOS.	18-03-003
8	LATCH SPRING	18-03-004
9	PWL-LI LATCH - 2 NOS.	20-03-002
10	SOLID DOWELL 1/2" x 2 1/8"	18-03-006
11	UPPER BODY LATCH	18-03-007
12	LANDING SHOULDER	20-03-003
13	LOWER BODY LATCH	18-03-009
14	STAINLESS STEEL BALL 22 mm	16-03-014
15	LANDING INDICATOR BUSH	16-03-015
16	LANDING INDICATOR BUSH O RING	16-03-016
17	ADJUSTING HEX NUT	20-03-004
18	ADJUSTING SPINDLE	20-03-005
19	WASHER - 2 NOS.	20-03-006
20	SHUT OFF VALVE - 2 NOS.	20-03-007
21	TAPER WASHER	20-03-008
22	THRUST BEARINGS - 3 NOS.	20-03-009
23	BEARING SPINDLE	20-03-010
24	GREASE FITTING	16-03-024
25	COMPRESSION SPRING	20-03-011
26	COMPRESSION SPRING WASHER	20-03-012
27	NYLOCK NUT, 1 1/4" UNC	20-03-013
28	INNER TUBE CAP ASSEMBLY	20-03-014
28A	INNER TUBE CAP	20-03-015
28B	CHECK VALVE BODY	20-03-016
28C	BRASS BUSHING	20-03-017
28D	STAINLESS STEEL BALL , 22 mm	16-03-014
28E	SPRING DOWELL 3/16" x 1 1/4"	20-03-018
29	INNER TUBE 1.5m / 5 ft	20-03-019
29	INNER TUBE 3.0m / 10 ft	20-03-020
30	RING STOP	20-03-021
31	CORE LIFTER	20-03-022
32	CORE LIFTER CASE	20-03-023
33	LOCKING COUPLING	20-02-001
34	ADAPTER COUPLING	20-02-002
35	RING LANDING	20-02-003
36	OUTER TUBE 1.5m / 5 ft	20-02-004
36	OUTER TUBE 3.0m / 10 ft	20-02-005
37	STABILIZER RING	20-02-006
38	THREAD PROTECTOR	20-02-007

Head Office: 524, Arun Chambers, Tardeo, Mumbai 400 034. INDIA.

Factory: Hadapsar, Pune. Tel.: +91-22-6663 5452 / 2351 6141

Email: sales@kuvawalacoredrill.com / mgk@kuvawalacoredrill.com

www.kuvawalacoredrill.com