


AWL CORE BARREL

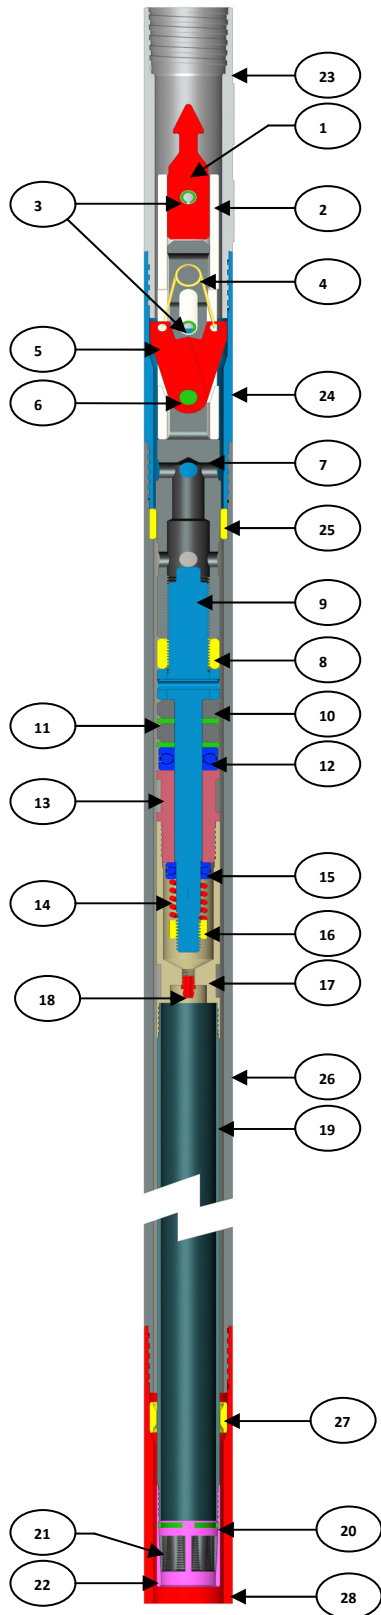

	ITEM DESCRIPTION	PART NUMBERS
1-28	AWL CORE BARREL 3.0m / 10 ft	12-00-100
1-28	AWL CORE BARREL 1.5m / 5 ft	12-00-110
1-22	AWL INNER TUBE ASSEMBLY	12-00-120
1-18	AWL HEAD ASSEMBLY	12-00-130
1	SPEARHEAD POINT	12-03-001
2	CASE LATCH	12-03-002
3	SPRING DOWELL 3/8" x 1 5/8" - 2 NOS.	12-03-003
4	LATCH SPRING	12-03-004
5	AWL LATCH - 2 NOS.	12-03-005
6	SOLID DOWELL 3/8" x 1 1/4"	12-03-006
7	BODY LATCH	12-03-007
8	ADJUSTING HEX NUT	12-03-008
9	ADJUSTING SPINDLE	12-03-009
10	SHUT OFF VALVE - 2 NOS.	12-03-010
11	WASHER - 2 NOS.	12-03-011
12	THRUST BEARING	12-03-012
13	BEARING SPINDLE	12-03-013
14	COMPRESSION SPRING	12-03-014
15	THRUST BEARING	12-03-015
16	NYLOCK NUT , 1/2" UNC	12-03-017
17	INNER TUBE CAP	12-03-018
18	GREASE FITTING	16-03-024
19	INNER TUBE 1.5m / 5 ft	12-03-020
19	INNER TUBE 3.0m/ 10 ft	12-03-021
20	RING STOP	12-03-022
21	CORE LIFTER	12-03-023
22	CORE LIFTER CASE	12-03-024
23	LOCKING COUPLING	12-02-001
24	ADAPTER COUPLING	12-02-002
25	RING LANDING	12-02-003
26	OUTER TUBE 1.5m / 5 ft	12-02-004
26	OUTER TUBE 3.0m/ 10 ft	12-02-005
27	STABILIZER RING	12-02-006
28	THREAD PROTECTOR	12-02-007